






BrandStand WaveLine B Series™ Setup Instructions

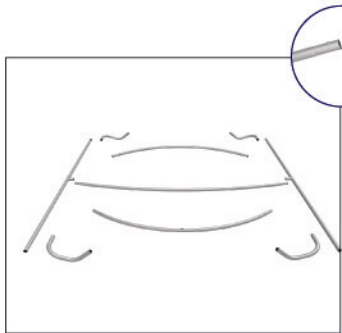


1. Assemble the two long curved and long straight sections (Connected with bungee cord). The frame is symmetrical. Either curved pole can be top or bottom.

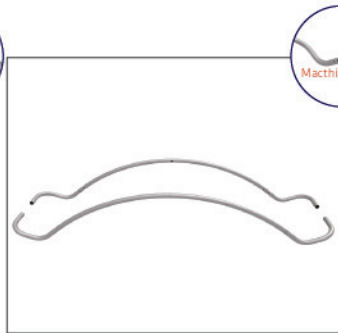

2. Connect corner sections to curved sections with matching shape codes.

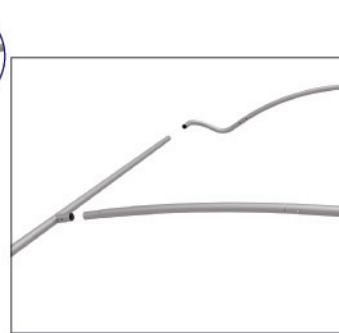

3. Make sure that you fit the middle support before you go any further.

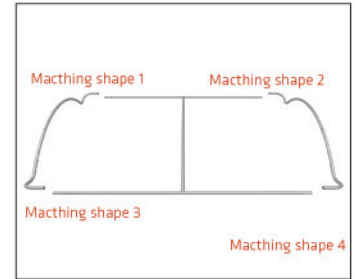

4. Connect corner sections to straight sections with matching shape codes.



5. Unzip print and lay image face down. Slide print onto frame like a pillow case.



6. Zip the bottom edge of the graphic beyond the centre point as shown above. Zip the remaining side and bottom to meet at the corner, attach lights if any.



7. when attaching the legs of the stand you need to make sure they are in the right place as different height will change angle of the display.



8. Make sure that the clamp is in the right place, you can feel the joint over the fabric. You can change the angle to what you prefer.




9. the shelves come semi assembled, just make sure that they are level before you tighten the clamp, that also can be adjusted by the angle of the legs.



10. Position lights as desired and tighten knob to hold in place.
WARNING! OVERTIGHTENING MAY CAUSE DAMAGE TO FABRIC IMAGE.



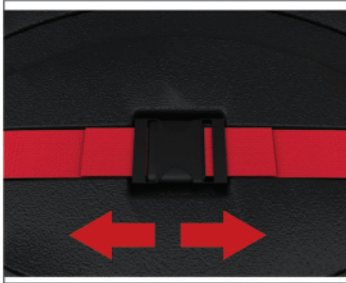

1. Put case flat on the floor and undo straps



2. Lift lid and remove the content of the case.



3. Put the lid (not the side with wheels) on the floor first. Place the supplied vertical support poles in place firmly.



4. Now lift the base and place on top of the support pole, fit the poles same as the base.



5. Place case in a clean area to fit the fabric print, like putting your pants on, start at the base, make sure zipper is in the middle.



6. Make sure that all wrinkles are out and the fabric looks straight.



6. Put the lid right on top and press to secure.



7. The zipper on the back is used to access storage.



8. Enjoy